

# X20PS9500

## 1 General information

The power supply module is used together with an X20 Compact or Fieldbus CPU. It is equipped with a supply for the Compact or Fieldbus CPU, X2X Link network and internal I/O power supply.

- Supply for Compact or Fieldbus CPU, X2X Link network and internal I/O power supply
- Electrical isolation of supply and CPU / X2X Link power supply
- Redundancy of CPU / X2X Link supply possible by operating multiple supply modules simultaneously
- RS232 configurable as an online interface
- CAN bus

## 2 Order data


Model number	Short description	Figure
	<b>System modules for compact CPUs</b>	
X20PS9500	X20 power supply module for Compact and Fieldbus CPUs and internal I/O power supply, X2X Link power supply	
	<b>Required accessories</b>	
	<b>System modules for compact CPUs</b>	
X20BB22	X20 compact CPU base, for compact CPU and compact CPU power supply module, base for integrated RS232 interface, X20 connection, X20 locking plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20BB27	X20 compact CPU base, for compact CPU and compact CPU power supply module, base for integrated RS232 and CAN bus interface, X20 connection, X20 locking plates (left and right) X20AC0SL1/X20AC0SR1 included	
	<b>System modules for fieldbus CPUs</b>	
X20BB32	X20 fieldbus CPU base, for fieldbus CPU and compact CPU power supply module, base for integrated RS232 interface, Slot for X20 interface module, X20 connection, X20 locking plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20BB37	X20 fieldbus CPU base, for fieldbus CPU and compact CPU power supply module, base for integrated RS232 and CAN bus interface, Slot for X20 interface module, X20 connection, X20 locking plates X20AC0SL1/X20AC0SR1 (left and right) included	
X20BB42	X20 fieldbus CPU base, for fieldbus CPU and compact CPU power supply module, base for integrated RS232 interface, 2 slots for X20 interface modules, X20 connection, X20 locking plates (left and right) X20AC0SL1/X20AC0SR1 included	
X20BB47	X20 fieldbus CPU base, for fieldbus CPU and compact CPU power supply module, base for integrated RS232 and CAN bus interface, 2 slots for X20 interface modules, X20 connection, X20 locking plates (left and right) X20AC0SL1/X20AC0SR1 included	
	<b>Terminal blocks</b>	
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed	

Table 1: X20PS9500 - Order data

### 3 Technical data

Model number	X20PS9500
<b>Short description</b>	
Power supply module	24 VDC power supply module for Compact or Fieldbus CPU, X2X Link power supply and I/O
Interfaces	1x RS232, 1x CAN bus <sup>1)</sup>
<b>General information</b>	
B&R ID code	0x2018
Status indicators	Overload, operating state, module status, RS232, CAN bus <sup>1)</sup>
Diagnostics	
Module run/error	Yes, using status LED and software
CAN bus data transfer <sup>1)</sup>	Yes, using status LED
RS232 data transfer	Yes, using status LED
Overload	Yes, using status LED and software
Power consumption for X2X Link power supply <sup>2)</sup>	1.42 W
Power consumption <sup>2)</sup>	
Internal I/O	0.6 W
Additional power dissipation caused by actuators (resistive) [W]	-
Certifications	
CE	Yes
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÜ 09 ATEX 0083X
UL	cULus E115267 Industrial control equipment
HazLoc	cCSAus 244665 Process control equipment for hazardous locations
DNV GL	Class I, Division 2, Groups ABCD, T5 Temperature: <b>B</b> (0 - 55°C) Humidity: <b>B</b> (up to 100%) Vibration: <b>B</b> (4 g) EMC: <b>B</b> (bridge and open deck)
LR	ENV1
KR	Yes
EAC	Yes
KC	Yes
<b>CPU / X2X Link power supply input</b>	
Input voltage	24 VDC -15% / +20%
Input current	Max. 0.7 A
Fuse	Integrated, cannot be replaced
Reverse polarity protection	Yes
<b>CPU / X2X Link power supply output</b>	
Nominal output power	7 W
Parallel connection	Yes <sup>3)</sup>
Redundant operation	Yes
Overload characteristics	Short circuit protection, temporary overload
<b>Input I/O power supply</b>	
Input voltage	24 VDC -15% / +20%
Fuse	Required line fuse: Max. 10 A, slow-blow
Reverse polarity protection	No
<b>Output I/O power supply</b>	
Nominal output voltage	24 VDC
Behavior on short circuit	Required line fuse
Permissible contact load	10 A
<b>Interfaces</b>	
Interface IF1	
Signal	RS232
Variant	Connection made using 12-pin terminal block X20TB12
Transfer rate	Max. 115.2 kbit/s
Interface IF3 <sup>1)</sup>	
Signal	CAN bus
Variant	Connection made using 12-pin terminal block X20TB12
Transfer rate	Max. 1 Mbit/s
<b>Electrical properties</b>	
Electrical isolation	CPU/X2X Link supply isolated from CPU/X2X Link power supply I/O supply not isolated from I/O power supply
<b>Operating conditions</b>	
Mounting orientation	
Horizontal	Yes
Vertical	Yes

Table 2: X20PS9500 - Technical data


Model number	X20PS9500
Installation elevation above sea level	
0 to 2000 m	No limitations
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m
Degree of protection per EN 60529	IP20
Ambient conditions	
Temperature	
Operation	
Horizontal mounting orientation	-25 to 60°C
Vertical mounting orientation	-25 to 50°C
Derating	See section "Derating"
Storage	-40 to 85°C
Transport	-40 to 85°C
Relative humidity	
Operation	5 to 95%, non-condensing
Storage	5 to 95%, non-condensing
Transport	5 to 95%, non-condensing
Mechanical properties	
Note	Order 1x terminal block X20TB12 separately Order 1x Compact CPU base X20BB22 or X20BB27 separately Order 1x Fieldbus CPU base X20BB3x/4x separately
Pitch	12.5 <sup>+0.2</sup> mm

Table 2: X20PS9500 - Technical data


- 1) CAN bus only when used with bus module X20BB27, X20BB37 or X20BB47.
- 2) The specified values are maximum values. For examples of the exact calculation, see section "Mechanical and electrical configuration" of the X20 system user's manual.
- 3) In parallel operation, it is only permitted to assume 75% of the rated power. It is important to make sure that all power supplies operated in parallel are switched on and off at the same time.

## 4 LED status indicators

For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" of the X20 system user's manual.


Figure	LED	Color	Status	Description
	r	Green	Off	No power to module
			Single flash	Mode RESET
			Blinking	Mode PREOPERATIONAL
			On	Mode RUN
	e	Red	Off	No power to module or everything OK
			Double flash	LED indicates one of the following states: <ul style="list-style-type: none"> <li>• Power supply for CPU / X2X Link overloaded</li> <li>• I/O power supply too low</li> <li>• Input voltage for CPU / X2X Link power supply too low</li> </ul>
	e + r	Solid red / Single green flash	Invalid firmware	
	l	Red	Off	CPU / X2X Link power supply within valid range
			On	Power supply for CPU / X2X Link overloaded
	S	Yellow	Off	CPU not transmitting data via the RS232 interface
			On	CPU transmitting data via the RS232 interface
	C	Yellow	Off	CPU not transmitting data via the CAN bus interface
			On	CPU transmitting data via the CAN bus interface
	T	Yellow	Off	Terminating resistor integrated in bus module X20BB27, X20BB37 or X20BB47 switched off
On			Terminating resistor integrated in bus module X20BB27, X20BB37 or X20BB47 switched on	

## 5 Pinout

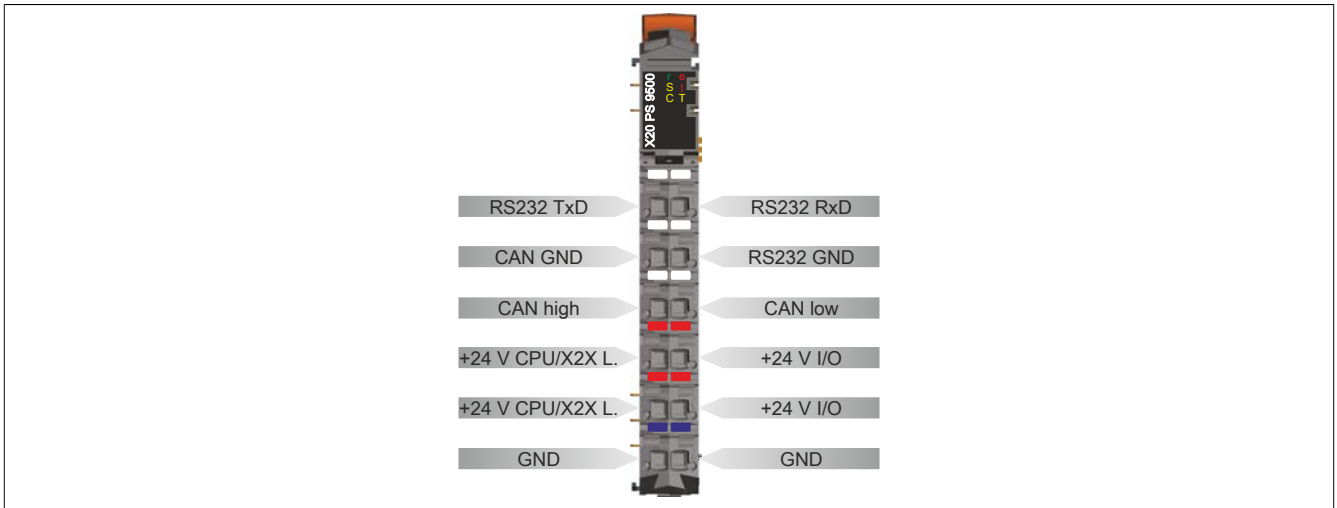


## 6 Connection examples

### With 2 isolated power supplies

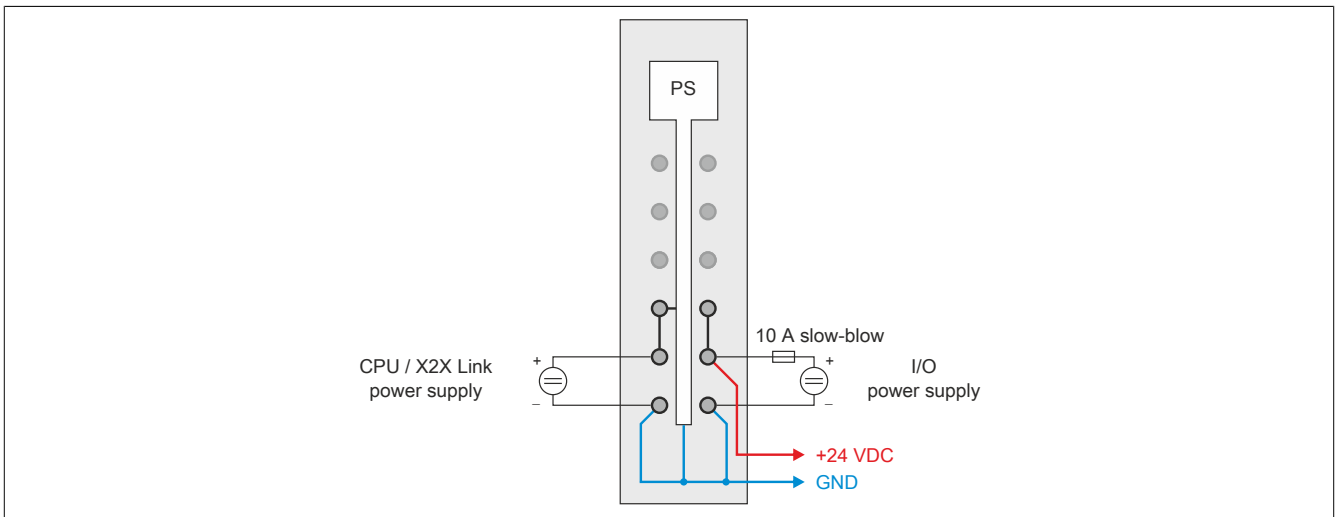


### With 1 power supply and jumper

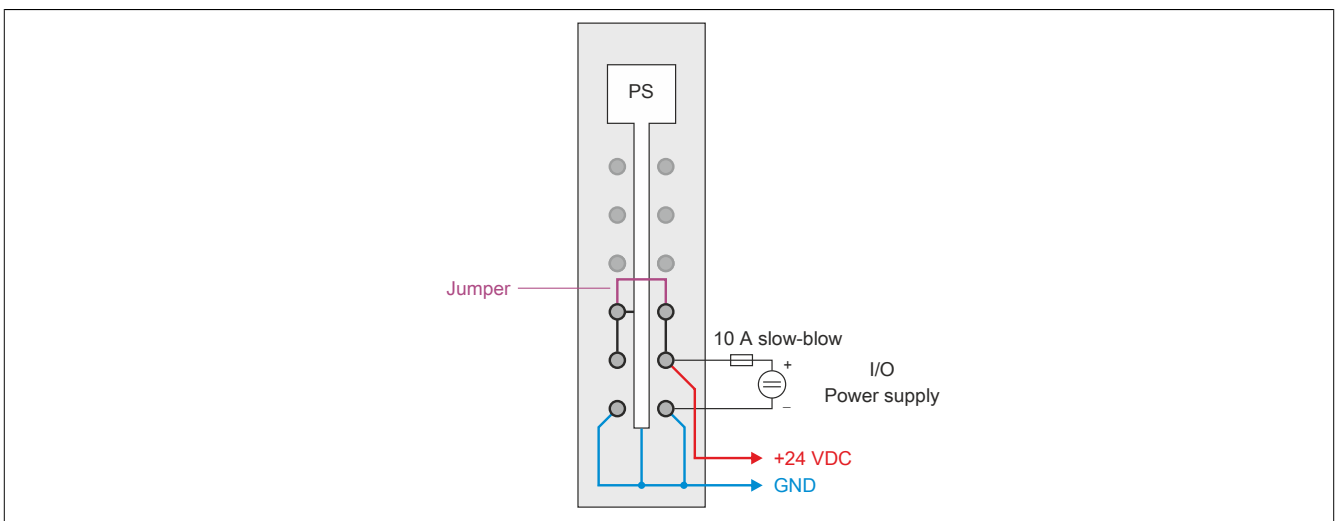

## 7 Derating

The nominal output power for the power supply is 7 W. Derating may need to be taken into account depending on the mounting orientation.

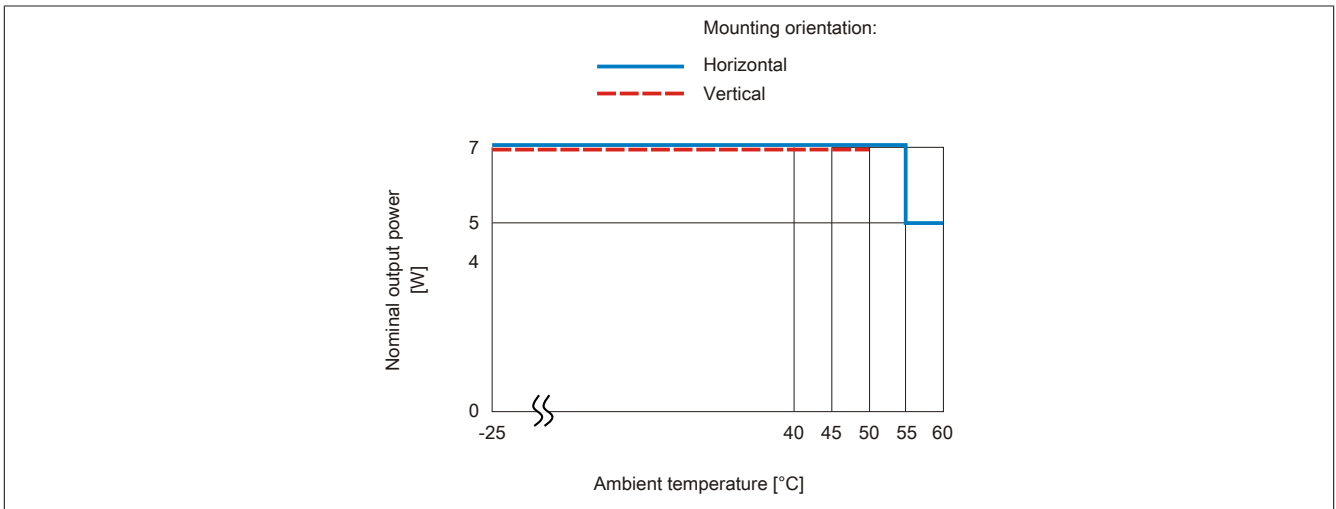

## 8 Register description

### 8.1 General data points

In addition to the registers described in the register description, the module has additional general data points. These are not module-specific but contain general information such as serial number and hardware variant.

General data points are described in section "Additional information - General data points" of the X20 system user's manual.

### 8.2 Function model 0 - Standard

Register	Fixed offset	Name	Data type	Read		Write	
				Cyclic	Acyclic	Cyclic	Acyclic
0	1	Status of the module	USINT	•			
		StatusInput01	Bit 0				
		StatusInput02	Bit 2				
2	2	SupplyCurrent	USINT	•			
4	3	SupplyVoltage	USINT	•			

Fixed modules require their data points to be in a specific order in the X2X frame. Cyclic access occurs according to a predefined offset, not based on the register address.

Acyclic access continues to be based on the register numbers.

### 8.3 Status of the module

Name:

StatusInput01 to StatusInput02

The following module power supply voltages are monitored in this register:

Bus supply current:	Bus supply current >2.3 A is displayed as a warning.
Bus supply voltage:	Bus supply voltage <4.7 V is displayed as a warning.
24 VDC I/O supply voltage:	I/O supply voltage <20.4 V is displayed as a warning.

Data type	Values
USINT	See the bit structure.

Bit structure:

Bit	Name	Value	Information
0	StatusInput01	0	No error
		1	Warning if overcurrent (>2.3 A) or undervoltage (<4.7 V)
1	Reserved	0	
2	StatusInput02	0	I/O power supply above the warning limit of 20.4 V
		1	I/O power supply below the warning limit of 20.4 V
3 - x	Reserved	0	

### 8.4 Bus power supply current

Name:

SupplyCurrent

This register displays the bus supply current measured at a resolution of 0.1 A.

Function model	Data type
0 - Standard	USINT

### 8.5 Bus supply voltage

Name:

SupplyVoltage

This register displays the bus supply voltage measured at a resolution of 0.1 V.

Function model	Data type
0 - Standard	USINT

## 8.6 Minimum cycle time

The minimum cycle time specifies the time up to which the bus cycle can be reduced without communication errors occurring. It is important to note that very fast cycles reduce the idle time available for handling monitoring, diagnostics and acyclic commands.

Minimum cycle time
100 $\mu$ s

## 8.7 Minimum I/O update time

The minimum I/O update time specifies how far the bus cycle can be reduced so that an I/O update is performed in each cycle.

Minimum I/O update time
2 ms